

DRAPER[®]

INSTRUCTIONS FOR 1700W 230V Pressure Washer

Stock No.28018

Part No.PW1730

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS PRODUCT.



DRAPER[®]

GENERAL INFORMATION

These instructions accompanying the product are the original instructions. This document is part of the product, keep it for the life of the product passing it on to any subsequent holder of the product. Read all these instructions before assembling, operating or maintaining this product.

This manual has been compiled by Draper Tools describing the purpose for which the product has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

1. TITLE PAGE

1.1 INTRODUCTION:

USER MANUAL FOR:

1700W 230V PRESSURE WASHER

Stock no. 28018

Part no. PW1730

1.2 REVISIONS:

Date first published November 2012

As our user manuals are continually updated, users should make sure that they use the very latest version.

Downloads are available from: <http://www.drapertools.com/b2c/b2cmanuals.pgm>

DRAPER TOOLS LIMITED

HURSLEY ROAD

CHANDLER'S FORD

EASTLEIGH

HAMPSHIRE

SO53 1YF

UK

WEBSITE: www.draper.co.uk

PRODUCT HELPLINE: +44 (0) 23 8049 4344

GENERAL FAX: +44 (0) 23 8026 0784

1.3 UNDERSTANDING THIS MANUALS SAFETY CONTENT:

WARNING! Information that draws attention to the risk of injury or death.

CAUTION! Information that draws attention to the risk of damage to the product or surroundings.

1.4 COPYRIGHT © NOTICE:

Copyright © Draper Tools Limited.

Permission is granted to reproduce this publication for personal & educational use only.

Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases this copyright notice must remain intact.

2. CONTENTS

2.1 CONTENTS

		<i>Page</i>
1	TITLE PAGE	
	1.1 INTRODUCTION	2
	1.2 REVISION HISTORY	2
	1.3 UNDERSTANDING THIS MANUAL	2
	1.4 COPYRIGHT NOTICE	2
2	CONTENTS	
	2.1 CONTENTS	3
3	GUARANTEE	
	3.1 GUARANTEE	4
4	INTRODUCTION	
	4.1 SCOPE	5
	4.2 SPECIFICATION	5
	4.3 HANDLING & STORAGE	5
5	HEALTH & SAFETY INFORMATION	
	5.1 GENERAL SAFETY INSTRUCTIONS FOR POWER TOOL USE	6
	5.2 SPECIFIC SAFETY INSTRUCTIONS FOR PRESSURE WASHER USE.....	8
	5.3 CONNECTION TO THE POWER SUPPLY	9A
6	TECHNICAL DESCRIPTION	
	6.1 MAIN COMPONENT DESCRIPTIONS	10A
7	UNPACKING & CHECKING	
	7.1 PACKAGING	11
	7.2 WHAT'S IN THE BOX	11
8	ASSEMBLY	
	8.1 ASSEMBLING THE WHEELS AND HANDLE	12
	8.2 ASSEMBLING THE HOSE AND LANCE.....	12-13
	8.3 ATTACHING THE WATER SUPPLY.....	13
	8.4 ADDING DETERGENT	13
9	OPERATION AND USE	
	9.1 ON/OFF SWITCH	14
	9.2 THE TURBO LANCE.....	15
	9.3 THE FIXED BRUSH.....	15
10	TROUBLESHOOTING.....	16
11	OPTIONAL ACCESSORIES.....	17
12	DISPOSAL	18
13	EXPLANATION OF SYMBOLS	19
	DECLARATION OF CONFORMITY	ENCLOSED

3. GUARANTEE

3.1 GUARANTEE

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, please return the complete tool to your nearest distributor or contact Draper Tools Limited, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF. England.

Telephone Sales Desk: (023) 8049 4333 or Product Helpline (023) 8049 4344.

A proof of purchase must be provided with the tool.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This guarantee period covering parts/labour is 12 months from the date of purchase except where tools are hired out when the guarantee period is ninety days from the date of purchase. The guarantee is extended to 24 months for parts only. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper warranty repair agent.

Note: If the tool is found not to be within the terms of warranty, repairs and carriage charges will be quoted and made accordingly.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your Draper guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the guarantee period.

Please note that this guarantee is an additional benefit and does not affect your statutory rights.

Draper Tools Limited.

4. INTRODUCTION

4.1 SCOPE

This machine is designed to clean machinery and property around the work place and home. It delivers a high pressure jet of hotwater that can cope in heavy duty cleaning applications. The extra heat delivers unparalleled cleaning power.

4.2 SPECIFICATION

Stock no	28018
Part no	PW1730
Working pressure	8,000kPa (80Bar)
Max. permissible pressure.....	11,000kPa (110Bar)
Max. flow rate	5.5L/min (330L/hour)
Rated voltage	230V~50Hz
Rated input	1700W
Type of protection	IPX5
Guaranteed sound power level.....	92dB(A)
Maximum recoil force	>20N
Vibration.....	1.5m/s ² ±0.5m/s ²
Weight	6.6kg/7.4kg

4.3 HANDLING & STORAGE

This pressure washer and accompanying accessories should not be stored at or below 0°C. Frozen water inside the machine can cause critical damage to pump and other components.

5. HEALTH & SAFETY INFORMATION

Have this tool repaired by a qualified person. This tool is designed to conform to the relevant international and local standards and as such should be maintained and repaired by someone qualified; using only original parts supplied by the manufacturer: This will ensure the tool remains safe to use.

5.1 GENERAL SAFETY INSTRUCTIONS FOR POWER TOOL USE

Warning: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery-operated (cordless) power tool.

1 Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2 Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

5. HEALTH & SAFETY INFORMATION

- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of these devices can reduce dust-related hazards.

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

IMPORTANT

On products exceeding 2000W it is recommended that the power cable and/or extension cable are fully unwound before a connection is made to the power supply. However, ensure the residual cable does not pose a trip hazard.

5. HEALTH & SAFETY INFORMATION

5.2 SPECIFIC SAFETY INSTRUCTIONS FOR PRESSURE WASHER USE

-  Warning: This appliance is for outdoor use only.
 -  Warning: Always disconnect the electricity and water supplies on completion of every job.
 -  Warning: Never use the appliance if the electrical cable or important parts of the appliance are damaged, e.g. safety devices, high pressure hose, gun, etc.
 -  Warning: This appliance has been designed for use with a neutral shampoo based on biodegradable anionic surface active detergents. The use of other detergents or chemicals may put the appliance's safety at risk.
 -  Warning: Never use the appliance with people in the vicinity, unless they are wearing protective clothing.
 -  Warning: Do not direct the nozzle toward mechanical parts containing lubricant grease, as the grease will dissolve and spread over the surrounding ground. Vehicle tyres/tyre valves may only be cleaned from a minimum distance of 30cm, otherwise the vehicle tyre/tyre valve could be damaged by the high-pressure jet. The first indication of this is a discoloration of the tyre. Damaged vehicle tyres/tyre valves can be deadly dangerous.
 -  Warning: High pressure jets may be dangerous if improperly used. Jets must never be pointed at people, animals, live electrical equipment or the appliance itself.
 -  Warning: The hoses, accessories and high pressure couplings are important for the appliance's safety. Use only hoses, accessories and couplings recommended (it is extremely important to protect these components against damage by avoiding their improper use and protecting them against bending, knocks and scratches).
- The gun is fitted with a safety catch. Whenever use of the machine is interrupted it is important to operate the safety catch to prevent accidental activation of the jet.
-  Warning:
 - Never point the jet at yourself or others to clean clothing or footwear.
 - Never allow children or untrained people to use the appliance.
 - Safety features: gun equipped with safety locking device, appliance
 - equipped with (Class 1) overload cutout, pump equipped with by-pass
 - valve or shutdown device.
 - The safety button on the gun is not there to lock the lever during operation, but to prevent its accidental operation.
 -  Warning: Appliances equipped with Total Stop System: these appliances should not be left in standby for more than 5 minutes.
 -  Warning: Switch the appliance off completely (master switch ON/OFF) whenever it is left unattended.

5. HEALTH & SAFETY INFORMATION

-  Warning: Every machine is tested in its operating conditions, so it is normal for a few drops of water to be left inside it.
-  Warning: Take care not to damage the electric cable. Have a damaged power cord replaced immediately by an authorized service point or an electrical specialist.
-  Warning: The high pressure hose is designed and produced to withstand high pressures. To avoid damage, it must be handled with special care. Misuse may lead to premature breakages or damage and cause the loss of warranty cover.
-  Warning: Never start the high-pressure cleaner without first completely unwinding the high-pressure hose.
-  Warning: When winding and unwinding the hose take care not to cause the high pressure cleaner to overturn.
-  Warning: Before unwinding or winding the hose, switch the machine off and release the pressure in the hose itself (switching off).

5.3 CONNECTION TO THE POWER SUPPLY

Make sure the power supply information on the machine's rating plate are compatible with the power supply you intend to connect it to.

This pressure washer comes supplied with a UK standard 3 pin plug fitted. It is designed for connection to a domestic power supply rated at 230V AC.

Apart from replacing the fuse in the plug, no other electrical work is recommended on this pressure washer.

Blank page

6. TECHNICAL DESCRIPTION

6.1 IDENTIFICATION



- | | | | |
|---|----------------------------------|---|--------------|
| ① | Handle | ④ | Water outlet |
| ② | Moulded approved plug and cable. | ⑤ | Wheel |
| ③ | ON/OFF Switch. | ⑥ | Water inlet |

6. TECHNICAL DESCRIPTION

6.1 MAIN COMPONENT DESCRIPTIONS

The "**TOTAL STOP**" automatic control device is designed to save electricity and extend the life of the pump/motor. The total stop device automatically activates and deactivates the high pressure cleaner every time the trigger is operated.

7. UNPACKING & CHECKING

7.1 PACKAGING

Carefully remove the pressure washer from the packaging and examine it for any sign of damage that may have happened during shipping. Lay the contents out and check them against the parts shown below. If any part is damaged or missing; please contact the Draper Helpline (the telephone number appears on the Title page) and do not attempt to use the pressure washer.

The packaging material should be retained at least during the guarantee period: in case the machine needs to be returned for repair.

Warning! Some of the packaging materials used may be harmful to children. Do not leave any of these materials in the reach of children.

If any of the packaging is to be thrown away, make sure they are disposed of correctly; according to local regulations.

7.2 WHAT'S IN THE BOX?

As well as the pressure washer unit there are several attaching parts.



- ⑦ Fixed fan jet lance
- ⑧ Turbo nozzle
- ⑨ Trigger assembly
- ⑩ Detergent bottle
- ⑪ 4M high pressure hose
- ⑫ Fixed brush.

8. ASSEMBLY

NOTE:

Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

8.1 ASSEMBLING THE WHEELS AND HANDLE - FIGS. 1 - 2

Locate the wheels into the holes which are located on both sides of the machine. Press the wheels into place and you should hear a click noise. Press the handle into the recess at the rear of the housing and secure in place using the screw provided.

Pass through the 2 remaining screws through the handle to secure the hose bracket in place.

FIG. 1



FIG. 2



8.2 ASSEMBLING THE HOSE AND LANCE - FIGS. 3 - 6

Connect the lance (7) to the trigger assembly (9) by pushing in the bayonet fitting and turning anti-clockwise 45° to lock in place.

The trigger lock is applied by pushing in the lever/button (9.1) which is located on the base of the gun. To prevent accidental operation ensure the lock is in place when the machine is not in operation.

FIG. 3


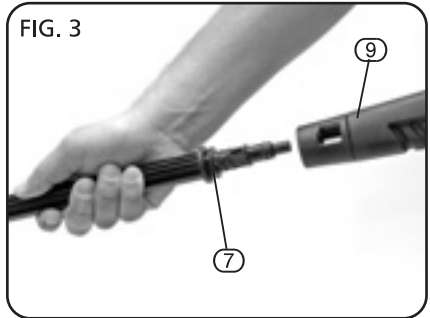



FIG. 4



8. ASSEMBLY

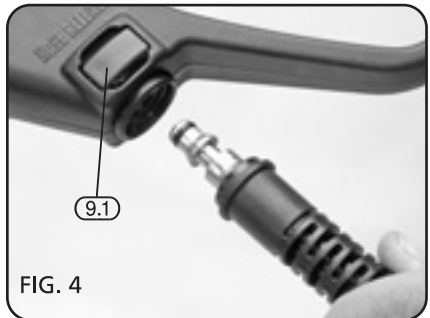

Fit the high pressure hose (11) onto the threaded outlet on the rear casing of the machine. Ensure a tight connection is made and take care not to cross the threads.

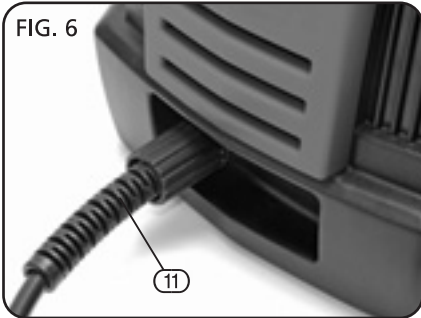


8.3 ATTACHING THE WATER SUPPLY - FIG. 7

To attach the pressure washer to the water supply a push fit hose connector (4.1) will be required (Draper Stock No.55196). Ensure the connector is correctly, fitted to the hose and that a 'click' is heard when attaching to the machine. The inlet is located on the rear of the machine.

The supply must be between 1.5Bar and 6.0Bar and 7 litres/min.

NOTE:
Always observe local byelaws and regulations.

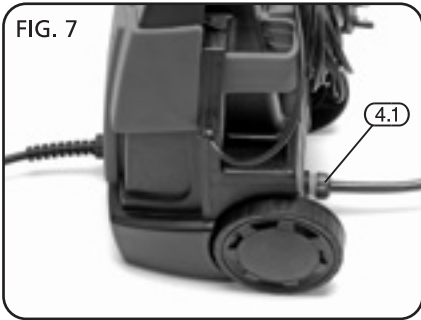

8.4 ADDING DETERGENT - FIG. 8

Remove the lid from the detergent bottle and fill with a suitable detergent (Draper Stock Nos 46033 and 46034). Secure the lid back onto the bottle and clip onto the nozzle of the fixed fan jet lance.



9. OPERATION AND USE

NOTE:

Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

9.1 ON/OFF SWITCH - FIG. 9

NOTE:

Do not run the motor "DRY, and ensure the machine is switched "OFF" prior to plugging in.

In the "O" position the machine is switched OFF.

In the "I" position the machine is switched ON.

This pressure washer is designed to be used in the upright position only.

To operate the pressure washer correctly carry out the following steps:

- Turn switch off.
- Plug in the pressure washer.
- Connect and turn on the water supply.
- Pull the trigger to bleed the air out of the system.
- Whilst the trigger is pulled switch on the pressure washer.
- When the air is purged release the trigger.

The machine is now ready for use. Ensure that during use the jet is not aimed at people, animals, electrical equipment or the pressure washer.

After use:

- Switch off and unplug the pressure washer.
- Switch off the water supply.
- Pull the trigger to release the pressure and drain the water.
- Disconnect the hose connection.
- Disassemble the lance, trigger and hose from the machine.
- Drain all remaining water and store away safely.



9. OPERATION AND USE


9.2 THE TURBO LANCE - FIG. 10

The turbo lance is not adjustable and cannot be used with detergent bottle. Be careful that high pressure water can remove paint and other surface treatments. It can also damage tarmac and may remove grouting between paving slabs.



9.3 THE FIXED BRUSH - FIG. 11

Be aware that foreign matter can get stuck within the bristles of the brush and can scratch the surface being cleaned.

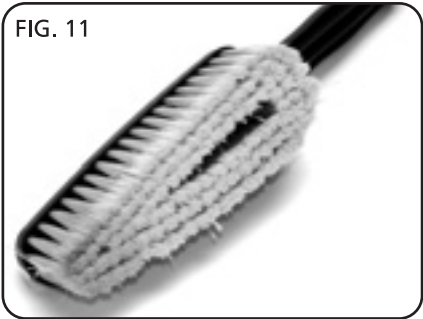

TOTAL STOP DEVICE:

This pressure washer is fitted with the TOTAL STOP DEVICE. This will cause the motor to start and stop when the trigger is activated, unlike standard washers where the motor would run continuously.

This device reduces the amount of water and electricity used and the amount of wear and tear on the machines components. Also this helps cut down on the amount of noise emitted during use.

10. TROUBLESHOOTING

Trouble	Possible Cause	Remedy
Motor pulsing.	Air in the system.	See the section on bleeding (see page 8).
Pump fails to start.	Plug fuse blown. Cable damaged.	Replace fuse. Have the cable replaced by a repair agent.
Pump starts/stops with the trigger operation.	Correct operation of the total stop device.	Nothing.
Bad spray pattern.	Nozzle blocked.	Unblock nozzle (see page 9).
Poor pressure.	Water leaks.	Check and tighten all the connections.

11. OPTIONAL ACCESSORIES

Stock No.	Description	Item
46304	Vehicle Wash and Wax Shampoo 1L	
46303	Vehicle Wash and Wax Shampoo 5L	

12. DISPOSAL

13.1 DISPOSAL

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- Do not abandon in the environment.
- Do not dispose of WEEE* as unsorted municipal waste.



* Waste Electrical & Electronic Equipment.

13 EXPLANATION OF SYMBOLS




Do not point hose at people, animals, pressure washer or electrical points.



Do not dispose of WEEE* as unsorted municipal waste.



Class II construction
(Double insulated).

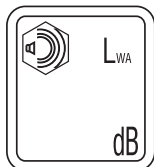

Single value noise marking.
(Maximum declared A-Weighted sound power level in decibels).

- **DRAPER TOOLS LIMITED,**
Hursley Road, Chandler's Ford,
Eastleigh, Hampshire. SO53 1YF. U.K.
- **Helpline:** (023) 8049 4344
- **Sales Desk:** (023) 8049 4333
- **Website:** www.drapertools.com
- **E-mail:** sales@drapertools.com
- **Sales Fax:** (023) 8049 4209
- **General Enquiries:** (023) 8026 6355
- **Service/Warranty Repair Agent**
For aftersales servicing or warranty repairs, please
contact the Draper Tools Helpline for details of an
agent in your local area.

YOUR DRAPER STOCKIST